



Troubleshoot

Symptom	Cause / treatment
A slight noise from the motor at work	This is the sound generated by the mechanical structure configuration, the phenomenon is not a malfunction.
Motor does not turn	Switch is not open.
Sudden stop working when massage	• Auto off after 15 minutes as preset. • Accidentally turn off the switch.

Technical Specifications

Rated power: 25W

For any other query Contact: customercare@nureca.com

3



Hammer Massager Pro



Instruction Manual



Please read the instruction manual carefully before use.

Attention

1. This product is not for medical use, only to provide the role of personal massage.
2. Do not allow children or people with disabled ability to operate this product, put the product in a place where children can not reach.
3. In the following cases, do not use this product:
 - The power cord is damaged;
 - Does not operate properly;
 - Fallen on the ground or damaged;
 - Fallen into the water.
4. Do not stand or sit directly on the product.
5. Excessive use will lead to overheating and shorten the product life; For repeated use, make the product cool down for some time then use.
6. Do not use in humid environment, such as bathroom.
7. Do not place the product near the fire or in direct sunlight.
8. Do not use when lightning.
9. Do not insert any objects in the opening of the product.

1



10. Do not cover massager while using, in order to avoid the motor overheating leading to failure.
11. Do not disassemble the internal components without permission, in order to avoid resulting in failure of the machine.

How to use

1. Press "O" key to open or close the massage.
2. Press "+" or "-" key to increase or decrease the massage intensity, total four kinds of intensity to choose.
3. Press "M" key to open auto-massage mode, total of four kinds of massage modes to choose;
4. All programs will automatically turn off after 15 minutes.
5. After use, turn off the switch.

Usage



2



Troubleshoot

Symptom	Cause / treatment
A slight noise from the motor at work	This is the sound generated by the mechanical structure configuration, the phenomenon is not a malfunction.
Motor does not turn	Switch is not open.
Sudden stop working when massage	• Auto off after 15 minutes as preset. • Accidentally turn off the switch.

Technical Specifications

Rated power: 25W

For any other query Contact: customercare@nureca.com

3



Hammer Massager Pro



Instruction Manual



Please read the instruction manual carefully before use.

Attention

1. This product is not for medical use, only to provide the role of personal massage.
2. Do not allow children or people with disabled ability to operate this product, put the product in a place where children can not reach.
3. In the following cases, do not use this product:
 - The power cord is damaged;
 - Does not operate properly;
 - Fallen on the ground or damaged;
 - Fallen into the water.
4. Do not stand or sit directly on the product.
5. Excessive use will lead to overheating and shorten the product life; For repeated use, make the product cool down for some time then use.
6. Do not use in humid environment, such as bathroom.
7. Do not place the product near the fire or in direct sunlight.
8. Do not use when lightning.
9. Do not insert any objects in the opening of the product.

1



10. Do not cover massager while using, in order to avoid the motor overheating leading to failure.
11. Do not disassemble the internal components without permission, in order to avoid resulting in failure of the machine.

How to use

1. Press "O" key to open or close the massage.
2. Press "+" or "-" key to increase or decrease the massage intensity, total four kinds of intensity to choose.
3. Press "M" key to open auto-massage mode, total of four kinds of massage modes to choose;
4. All programs will automatically turn off after 15 minutes.
5. After use, turn off the switch.

Usage



2