



FOOT SPA MASSAGER



Instruction Manual

Please Read This Instruction Manual Carefully before Use



Important Safeguards

When using electrical appliances, in order to reduce the risk of fire, electric shock, and/or injury to persons, basic safety precautions should always be followed, including:

For Your Safety

- Read all instructions carefully, even if you are quite familiar with the appliance.
- This appliance is not intended for use by children or disabled persons without supervision. Never leave appliance unattended when in use.
- Young children should be supervised to ensure they do not play with appliance.
- Switch off and remove the plug from the power outlet before cleaning, filling, moving, or when not in use. To unplug, grasp the plug and remove from the power outlet. Never pull from the cord itself. Never carry the appliance by the cord.
- Do not operate the appliance if it has a damaged cord or begins to malfunction in any manner.
- The product is intended for household use only.
- Do not attempt to repair or disassemble the appliance. There are no user serviceable parts.
- Do not use outdoors.
- Do not use while bathing or showering.
- Do not place or store the appliance where it can fall or be pulled into a sink or tub.
- Do not use bath oils, gels, or other substances. The device should only be filled with water.
- Do not attempt to plug or unplug the appliance while feet are in water.
- Do not use attachments not recommended or provided by the supplier.

Warning

- Never immerse the Foot Spa in water or other liquids.
- Always check the temperature of the water before placing your feet into it.
- Do not stand in the unit. To use, sit down and place your feet in the appliance.
- Ensure hands are dry when operating the switch or removing the plug.
- Keep cord away from heated surfaces.
- Do not sleep while operating.
- Never drop or insert objects into the appliance.
- Do not operate where aerosol (spray) products are being used or where oxygen is being administered.



- Do not operate under a blanket or pillow to prevent excess heating. Excessive heating could cause a fire, electrical shock, or injury.
- If you have any concerns regarding your health, consult with a doctor prior to using the appliance.
- Individuals with a pacemaker should consult a physician before using the appliance.
- In case of pregnancy, diabetes, or illness, consult your doctor before using the appliance.
- If you experience pain in a muscle or joint for a prolonged period of time, discontinue use and consult your doctor. Persistent pain could be a symptom of a more serious condition.
- Never use the appliance if open wounds, severe bruising, swelling, burns, inflammation, or open lesions are present.
- Discontinue use if you experience pain or discomfort and consult your doctor.

Product structure



1

2

5

4

3

- 1. One Button Start**
This foot bath is equipped with "one button start" system. Press the "POWER" button to turn on the bubble and heating function.
- 2. Mechanical roller massage**
Mechanical roller is equipped with many massage points, that helps to foot from & rear rubbing massage, helps promote blood circulation effect.
- 3. Acupuncture point massage**
At the bottom of foot bath is equipped with many massage acupuncture points, effectively stimulate foot acupuncture points, relieve physical and mental fatigue.
- 4. Enclosed cover**
Fully enclosed & insulation cover can effectively reduce heat emission and improve heating speed.
- 5. Handle design**
By using the portable handle, convenient for the elderly or the infirm to use.
- 6. Bubble shock massage**
A bubble jet at the bottom of the foot bath, to impact the sole acupoints, to play a role in relieving muscle tension and flexible massage, improve foot microcirculation, and promote good health.



Control Panel



Product Operating



- POWER**
Press the button to generate bubbles and for heating function (the default setting of this machine for 60 minutes, the default set temperature is 42°C).Note: When the power is connected, the switchlight of product will flash, the digital display screen will show "OF".
- Bubble & Heating**
While working, press this button for bubbles & heating function. Bubble and heating indicator lights on or off.
- Temperature setting**
In the opening heating state, by pressing this button will increase temperature by 1°C. The temperature range is 35°C to 48°C. While setting temperature, the display shows the set temperature, after 3 seconds automatically return to display the current temperature. (When the water reaches temperature you set, the heating function will be off.)
- Red light**
While working, press this button to open or close red light function. Red indicator lights on or off.

Maintenance

- To Clean**
- Never allow water on any other liquids to come into contact with the control switch.
- After cleaning, wipe surfaces with a dry cloth.
- Never use abrasives, detergents, or cleaning agents.

To Store

- Periodically straighten the cord if it becomes twisted.
- Unplug the appliance from the outlet and allow it to cool.
- Store in its box or a clean and dry place.
- To avoid breakage, do not wrap the power cord around the unit.
- Do not hang the appliance by the power cord.

For any query Contact: custos@nureca.com

Technical Specifications

Symptom	Cause	Treatment
No power	Power plug is not plugged in properly	Connect the power plug in the correct way
Unable to heat	Current water temperature too high	Increase temperature setting
Stopped Working	Current water temperature too high	Reset Time

Troubleshoot



Power: 500W
Waterproof rating: IPX4
Highest temperature: 48 ± 2°C