



ACTIVE HAMMER MASSAGER



Instuction Manual

Please read the instruction manual carefully before use.

Attention

- 1.This product is not for medical use, only to provide the role of personal massage.
- 2.Keep out of reach of children.
- 3.In the following cases, do not use this product:
 - The power cord is damaged;
 - Does not operate properly;
 - Fallen on the ground or damaged;
 - Fallen into the water.
- 4.Do not stand or sit directly on the product, it may lead to fall accident.
- 5.If the power cord is damaged must use special cord or buy the dedicated components from the supplier.

- 7.Do not use the voltage over 220V.
- 8.Do not pull the power cord directly with hands.
- 9.Do not use in the humid environment, such as bathroom.
- 10.Do not place the product near the fire or in direct sunlight.
- 11.Do not use when lightning.
- 12.Do not cover massager while in use, in order to avoid the motor overheating leading to failure.
- 13.Do not disassemble the internal components without permission, in order to avoid failure of the machine.

Usage



1

2

How to use

- 1.Insert the plug into the power socket.
- 2.Press "⏻" button to turn on the machine. Increase or decrease the massage intensity by pressing "+" or "-".
- 3.Press "🔄" to switch between different massage modes.
- 4.All programs will automatically turn off after 15 minutes.
- 5.After use, turn off the switch and pull the power plug correctly.

Warm Notice

1. Do not use the product for more than 15 minutes.
2. Please keep the appropriate distance from TV.

Cleaning and Maintenance

1. Before cleaning, turn off the power switch and pull the power plug.
2. Clean it with a soft cloth dipped with a natural detergent Do not use strong chemical to clean.
3. Avoid collision, weight & hard objects to stab on the surface of Product.
4. Place the product in a cool and dry location.

3

Technical Specifications

Rated voltage: 220V
 Rated frequency: 50HZ
 Rated power: 25W

Troubleshoot

Symptom	Cause / treatment
A slight noise from the motor at work	This is the sound generated by the mechanical structure configuration, the phenomenon is not a malfunction.
Motor does not turn	Switch is not open
Suddenly stops working when massage	·Accidentally turn off the switch. ·Exceeds 15 minutes

For any query contact:-shiatsu@drphys.io

4

5